
OBJECTS
BY ESTUDIO CARME PINÓS

AR-K
LARGE

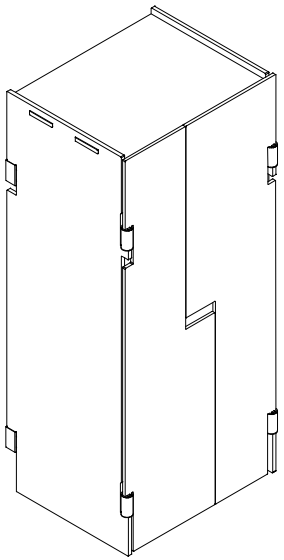

Products Details
Wooden boards
- -Material: 15 mm laminated birchwood
- -Finish: Varnished
- -Dimensions: 71,5 x 57 x 160 cm

Shelves (4units)
- -Material: 2mm steel plate
- -Finish: Dark gray coat
- -Dimensions: 66 x 30 x 12 cm


Weight (whole set): 24.5kg-54.01 lb.

Warning
Read each step carefully before beginning assembly.
This instructions booklet contains important SAFETY information.
You can be seriously injured if you don't follow instructions.
For more information access **www.objects.es**


Maintenance instructions
Wipe the surface with a soft dry cloth.
Do NOT use any cleaner containing acids, ammonia or abrasives.

components


A. Shelf AR-K.
4 units

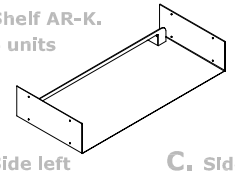


B. Side left
1 unit

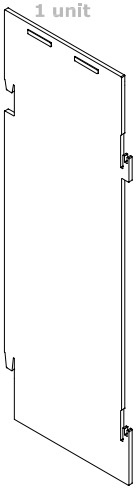


C. Side right
1 unit

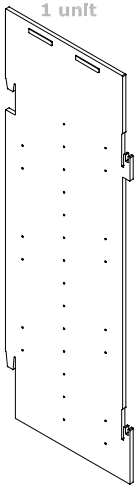


D. Door left
1 unit



E. Door right
1 unit



F. Top cover.
1 unit

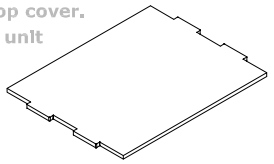



G. Fixing AR-K.
4 units



H. Hinge support
4 units



I. Hinge support
4 units




J. PVC bearing
8 units




K. PVC bearing
4 units



L. Steel sleeve
4 units



M. Screw 4.5x50
8 units




N. Fisher plastic wall plug
8 units

O. Tee Nut M3
16 units



P. Bolt M3x15
16 units

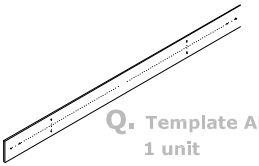


Q. Template AR-K
1 unit



R. Allen key
1 unit


instructions

1 Mark assembly points

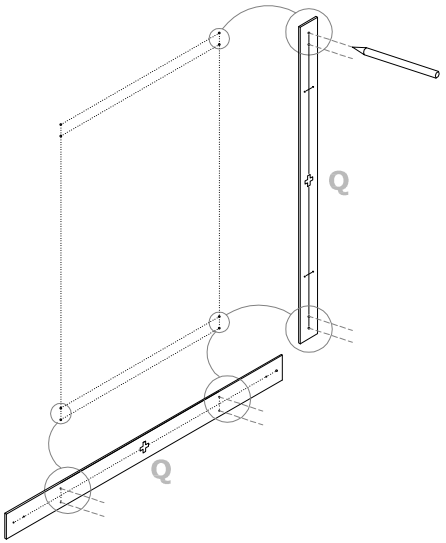

-Use template (Q) in both positions (vertical and horizontal) to mark assembly points. Check horizontal level.


2 Fix fixings

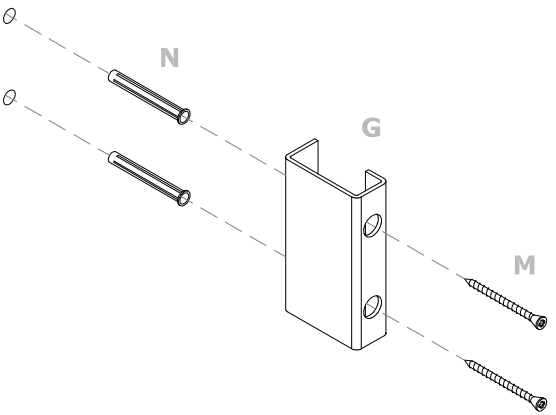

- WARNING. Provided plastic wall plugs are to be used for brick walls, they can not be used for plaster board walls.


instructions

3 Fix Tee nuts

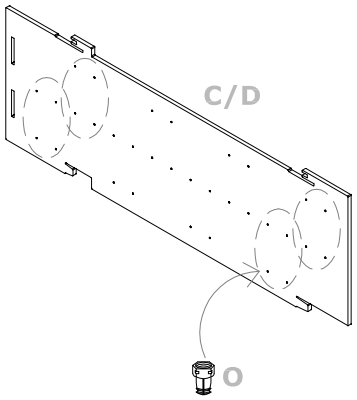

-Fix Tee nuts onto the holes of sides of wardrobe choosing shelve position. Use a hammer.


4 Mount external box

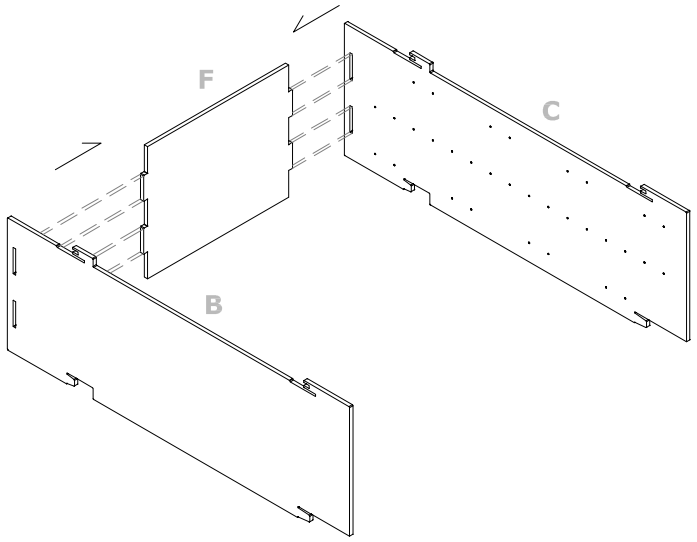

-Mount components on the floor for easier assembly


instructions

5 Mount internal shelves

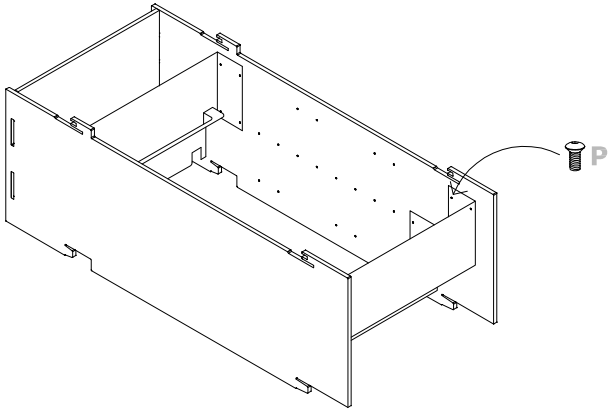


-Assembly shelves and turn wardrobe in vertical position.

6 Hang wardrobe from fixings

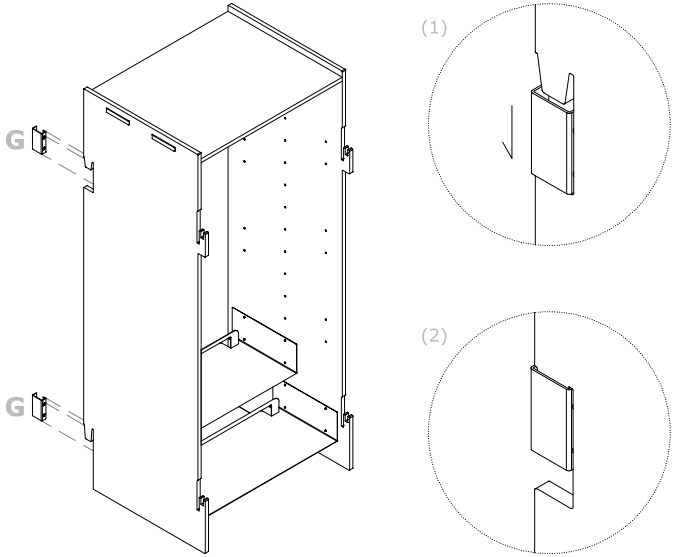


instructions

7 Mount wardrobe hinges

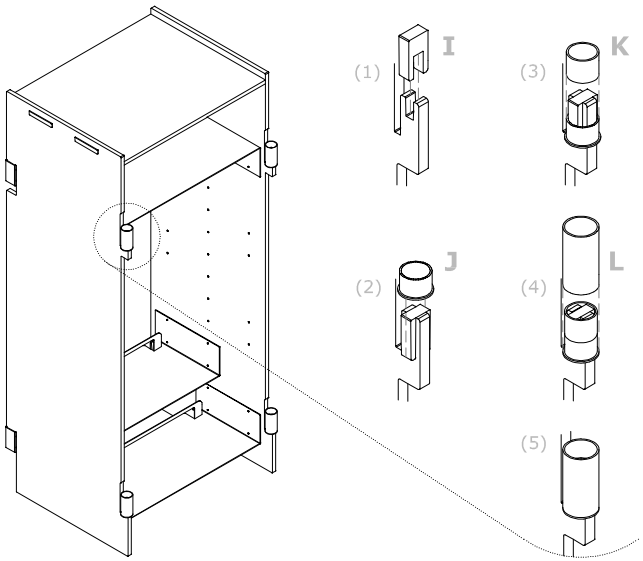


8 Mount door hinges

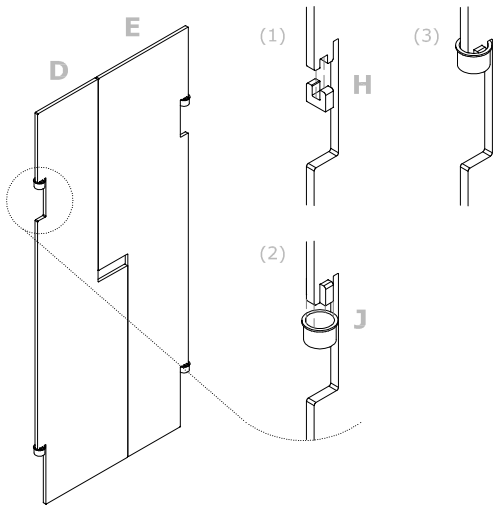


instructions

9 Assembly doors

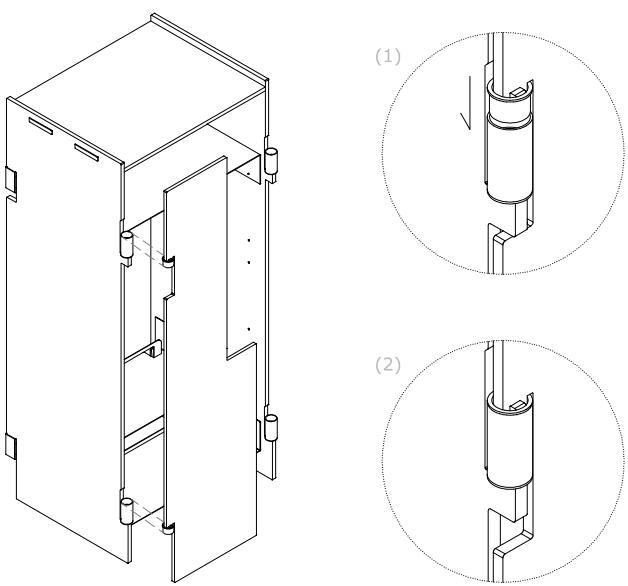


10 Wardrobe mounted

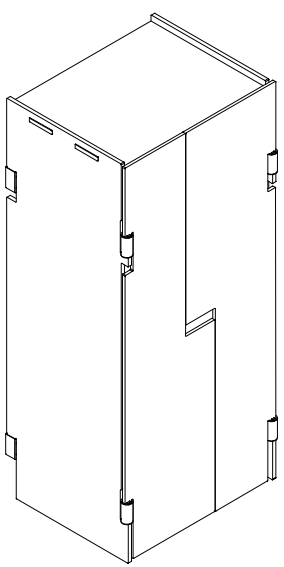

OBJECTS
BY ESTUDIO CARME PINÓS

ENGLISH

AR-K SMALL

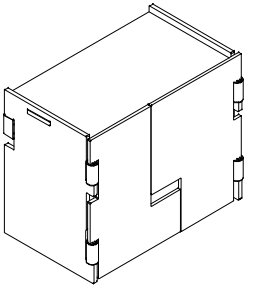

Product Details
Wooden boards
- -Material: 15 mm laminated birch wood
- -Finish: Varnished
- -Dimensions: 71,5 x 38.5 x 58 cm

Shelves (2 units)
- -Material: 2mm steel plate
- -Finish: Dark-grey coated
- -Dimensions: 66 x 30 x 12 cm


Weight (whole set): 16.35 kg-36.04 lb.

Warning
Read each step carefully before beginning assembly.
This instructions booklet contains important SAFETY information.
You can be seriously injured if you don't follow instructions.
For more information access **www.objects.es**


Maintenance instructions
Wipe the surface with a soft dry cloth.
Do NOT use any cleaner containing acids, ammonia or abrasives.

components


A. Shelf AR-K.
4 units

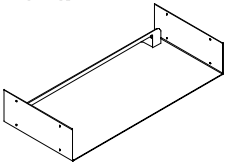


B. Side left
1 unit

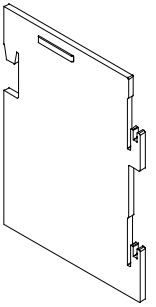


C. Side right
1 unit

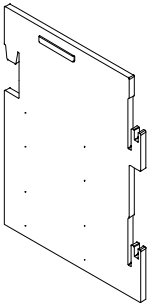


D. Door left
1 unit

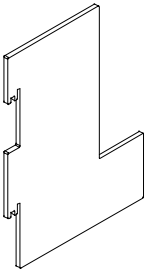

E. Door right
1 unit

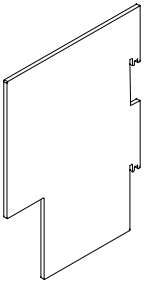

F. Top cover
1 unit

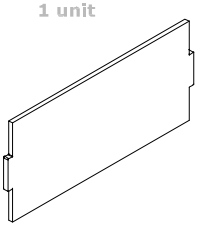




G. Fixing AR-K.
4 units



J. PVC bearing
8 units




M. Screw 4.5x50
8 units




H. Hinge support
4 units



K. PVC bearing
4 units



N. Fischer wall plastic plug
8 units

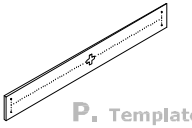

P. Template AR-K
1 unit



I. Hinge support
4 units



L. Steel sleeve
4 units




O. Bolt M3x15
16 units



Q. Allen key
1 unit


instructions

1 Mark assembly points

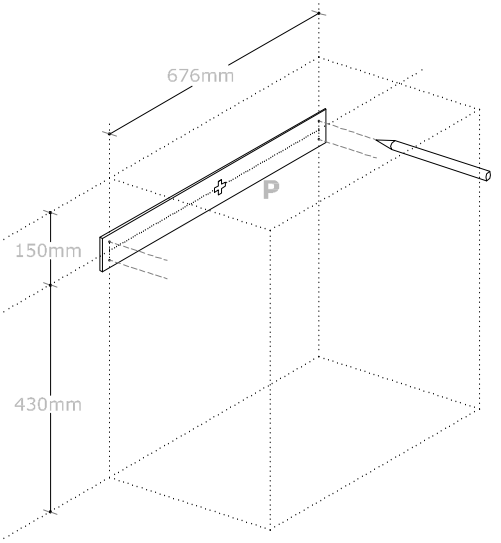

-Use template (P) in horizontal position to mark assembly points.


2 Fix fixings

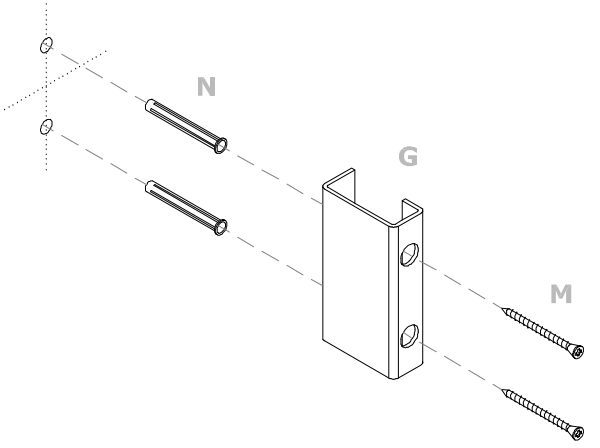

- WARNING. Provided plastic wall plugs are to be used for brick walls, they can not be used for plaster board walls.


instructions

3 Mount top cover

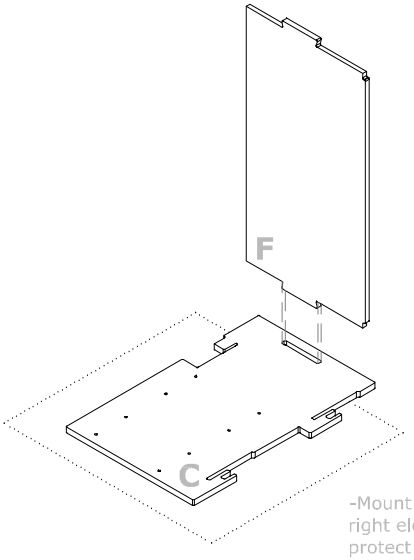

-Mount top cover on to the side right element. Take care and protect the floor.


4 Mount external box

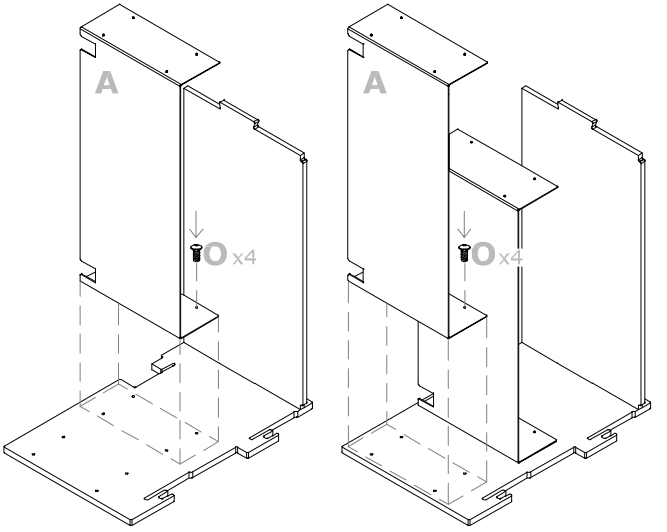

-Assembly internal shelves


instructions


5 Mount external box

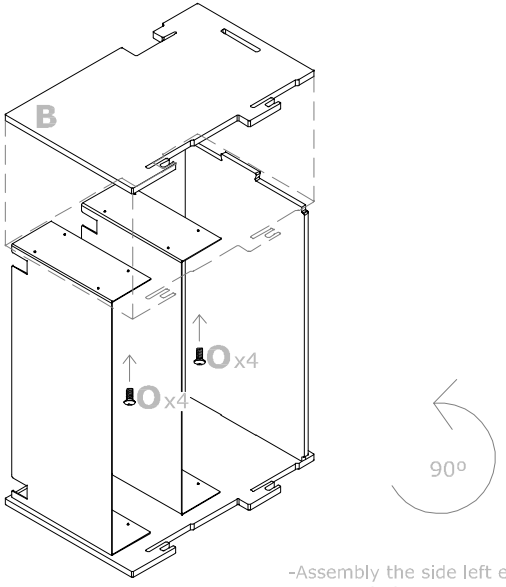

-Assembly the side left element and turn wardrobe in vertical position.


6 Hang wardrobe from fixings

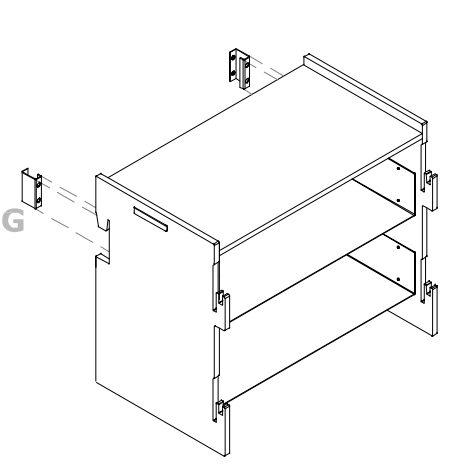

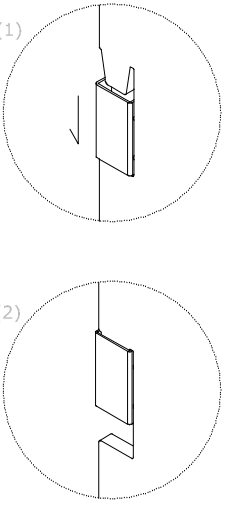


instructions

7 Mount wardrobe hinges

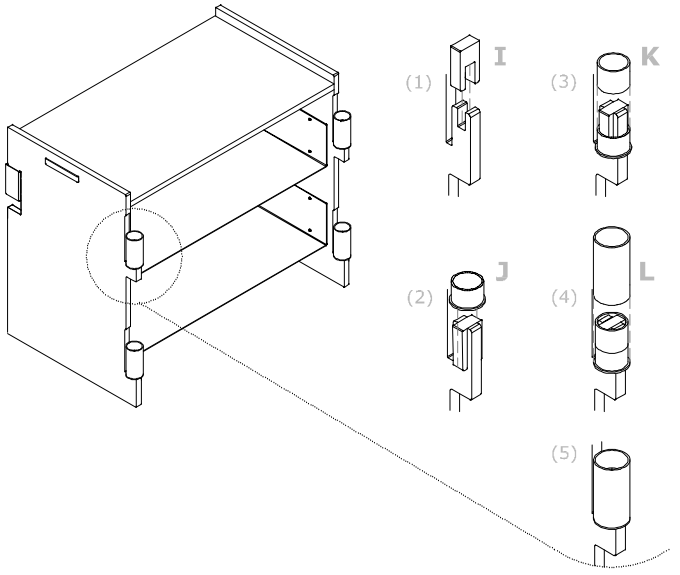


8 Mount door hinges

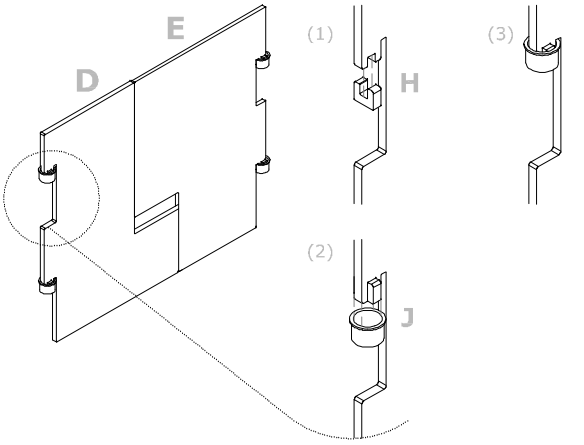

instructions

9 Assembly doors

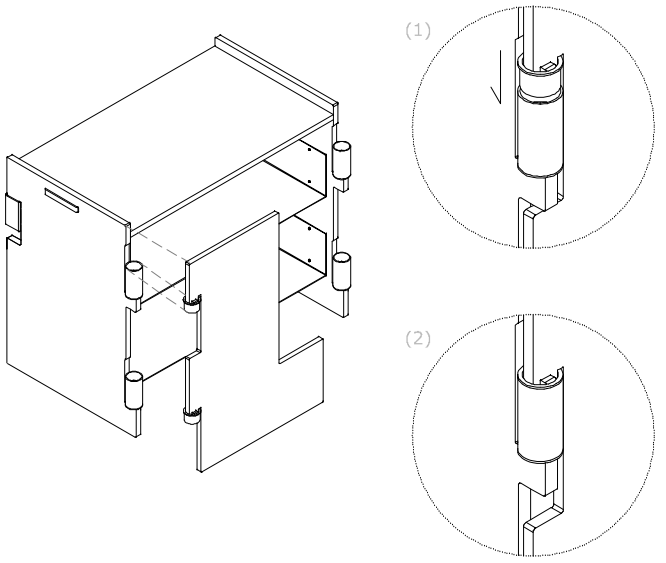

10 Wardrobe mounted

